




## TO THE INSTALLER: WIRING INSTALLATION INSTRUCTIONS



**WELDING NOTE !!! DISCONNECT ALL BATTERY CABLES. ALWAYS DISCONNECT THE GROUND CABLE FIRST. ATTACH THE WELDING GROUND TO THE TRUCK RATHER THAN THE LIFTGATE.**

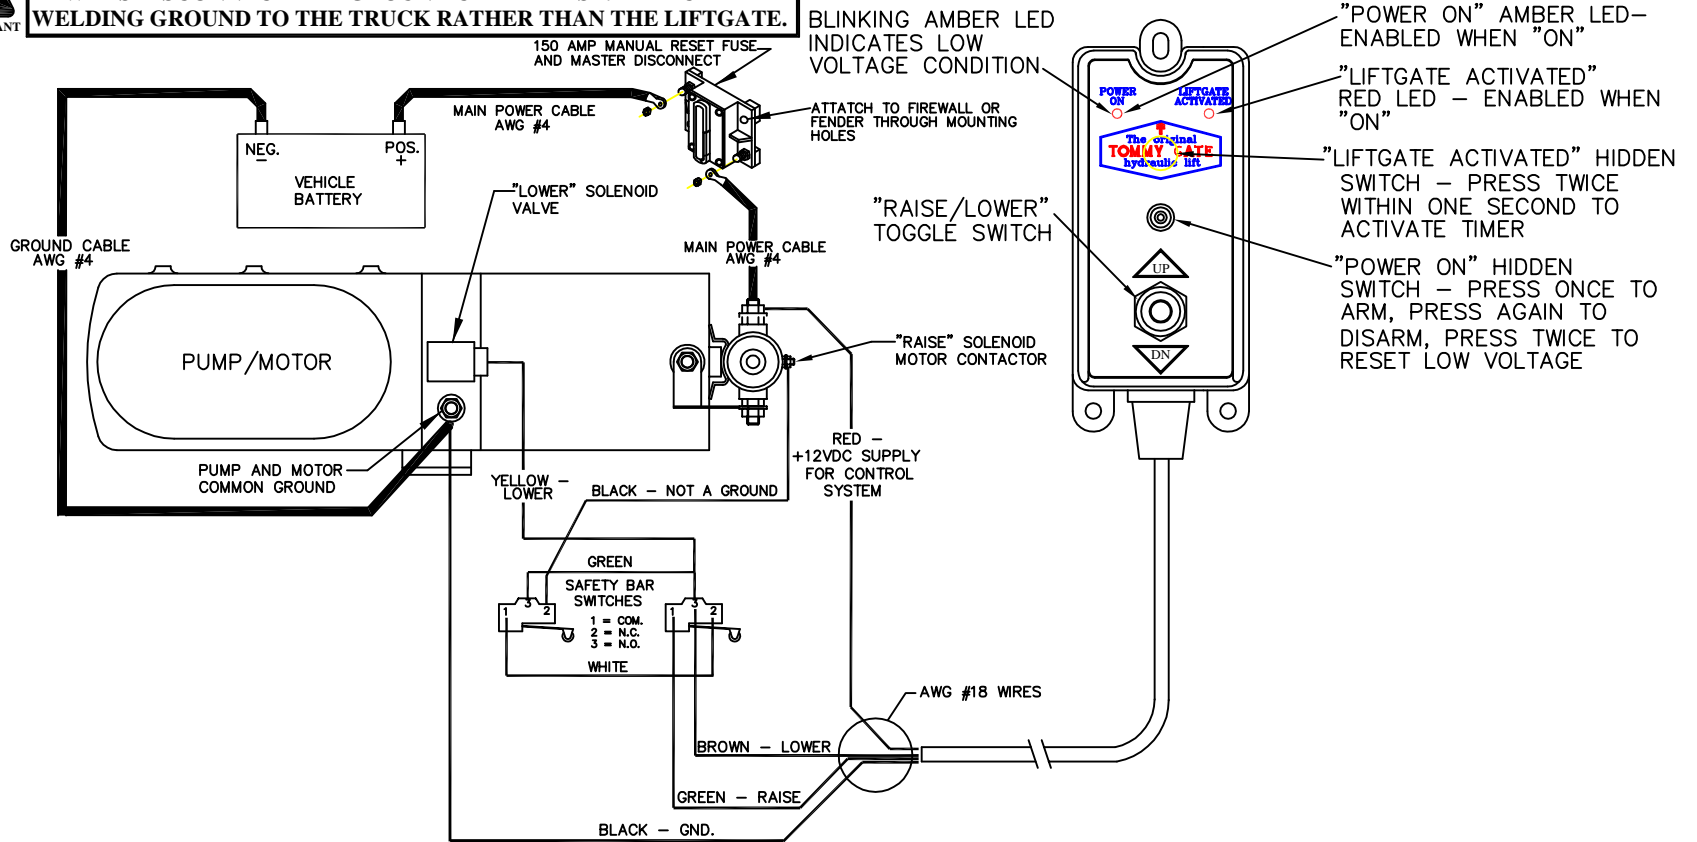

**!!! PLEASE READ AND FOLLOW ALL DIRECTIONS BEFORE PROCEEDING !!!**



**NOTE !!! IF GATES ARE NOT WIRED IN ACCORDANCE WITH THIS DIAGRAM YOUR WARRANTY WILL BE VOID.**

**IMPORTANT:** The pump and motor unit for this lift can require up to 205 Amps of electrical power at 12 volts D.C. Be sure you connect the black cable to the negative terminal of the battery.